Salvus Emergency Route

Surface Mounted

Installation instructions

collingwood

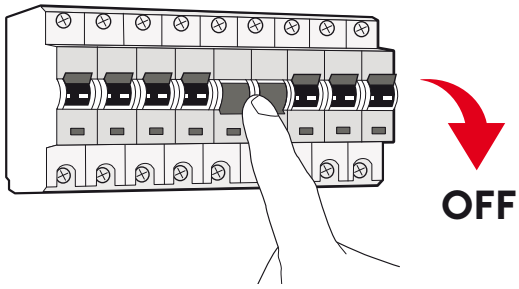


Fig 1.

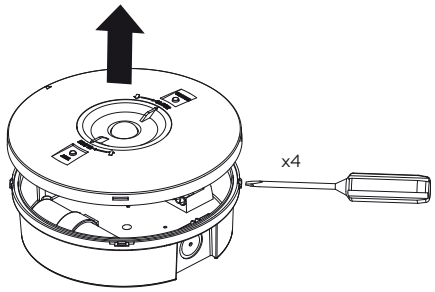


Fig 2.

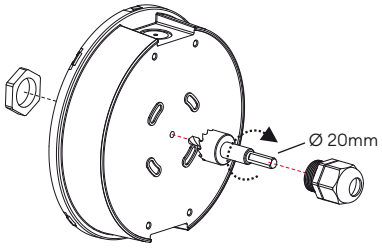


Fig 3.

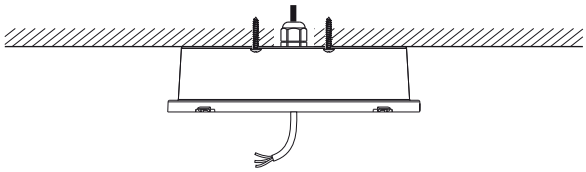


Fig 4.

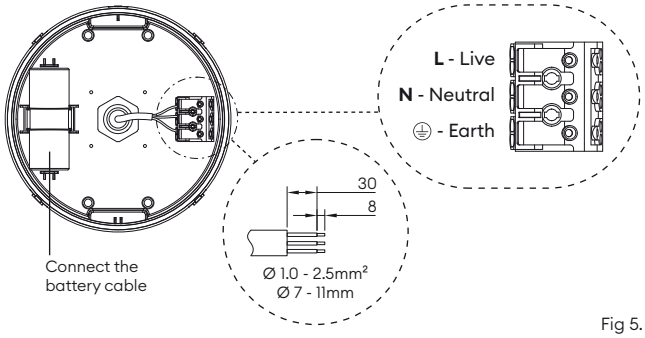


Fig 5.

The self-test function can be disabled by removing the green 2-pin jumper connector from the PCB.

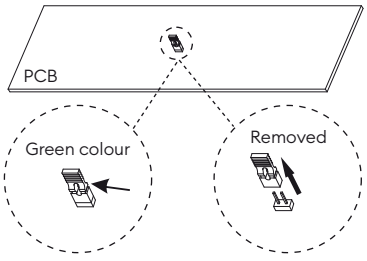


Fig 6.

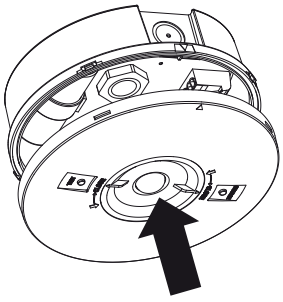


Fig 7.

en **t** +44 (0) 1604 495 151 I **f** +44 (0) 1604 495 095 I **e** sales@collingwoodgroup.com I **w** collingwoodlighting.com
Collingwood Lighting, Brooklands House, Sywell Aerodrome, Sywell, Northampton NN6 0BT, United Kingdom

fr **t** +32 (0)4 351 91 40 I **e** info@indigo-lighting.com I **w** www.indigo-lighting.com
Indigo S.A. / N.V. Rue de la légende 32 G, 4141 Srimont – Belgique

Salvus Emergency Route

Surface Mounted

Installation instructions

collingwood

Installation Data

- Isolate the mains supply, prior to wiring.
- This unit must be wired by a qualified electrician or suitable competent person.
- Battery must be replaced when the unit no longer meet its rated emergency duration, or if a battery fault occurs. Contact Collingwood Lighting for a suitable replacement.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

<table>
<tr><th colspan="5">LED indicator status</th></tr>
<tr><th>Indicator</th><th>Status</th><th colspan="3">LED indicator flash code</th></tr>
<tr><td>Green</td><td>No Faults</td><td colspan="3">ON</td></tr>
<tr><td rowspan="5">Red</td><td>Battery Fault</td><td colspan="3">Flashing once every 3s</td></tr>
<tr><td>LED Fault</td><td colspan="3">Flashing twice every 3s</td></tr>
<tr><td>Duration Time: <3hours</td><td colspan="3">Flashing three times every 3s</td></tr>
<tr><td rowspan="2">Self-Test Mode</td><td>Yearly Test</td><td>Monthly Test</td><td>Manual Test</td></tr>
<tr><td>Flashing four times every 1s (Last 3 hours)</td><td>Flashing four times every 1s (Last 10 mins)</td><td>Flashing four times every 1s (Last 5 mins)</td></tr>
</table>

Test switch functionality

- Hold test button for 1s – reset the self-test timer for yearly and monthly test.
- Hold test button for 3s – start 5min functional test.

Disposal of this product should be separate from household waste. Please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resource. Household users should contact their local government office for details of where and how they can take these items for environmentally safe recycling.

5 year warranty

en **t** +44 (0) 1604 495 151 I **f** +44 (0) 1604 495 095 I **e** sales@collingwoodgroup.com I **w** collingwoodlighting.com
Collingwood Lighting, Brooklands House, Sywell Aerodrome, Sywell, Northampton NN6 0BT, United Kingdom

fr **t** +32 (0)4 351 91 40 I **e** info@indigo-lighting.com I **w** www.indigo-lighting.com
Indigo S.A. / N.V. Rue de la légende 32 G, 4141 Srimont – Belgique

Salvus Emergency Route

Surface Mounted

Installation instructions

collingwood

Emergency installation and maintenance record

Product : _____

Installer : _____

Date installed : _____

Commissioning by : _____

Date commisioned : _____

	Year 1		Year 2		Year 3		Year 4	
Month	Signed	Date	Signed	Date	Signed	Date	Signed	Date
1								
2								
3								
4								
5								
6								
7								
8								
9								
10								
11								
12								

Disposal of this product should be separate from household waste. Please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resource. Household users should contact their local government office for details of where and how they can take these items for environmentally safe recycling.

5 year warranty

en **t** +44 (0) 1604 495 151 I **f** +44 (0) 1604 495 095 I **e** sales@collingwoodgroup.com I **w** collingwoodlighting.com
Collingwood Lighting, Brooklands House, Sywell Aerodrome, Sywell, Northampton NN6 0BT, United Kingdom

fr **t** +32 (0)4 351 91 40 I **e** info@indigo-lighting.com I **w** www.indigo-lighting.com
Indigo S.A. / N.V. Rue de la légende 32 G, 4141 Srimont – Belgique