
Recessing Kit for Salvus Bulkhead

Installation instructions

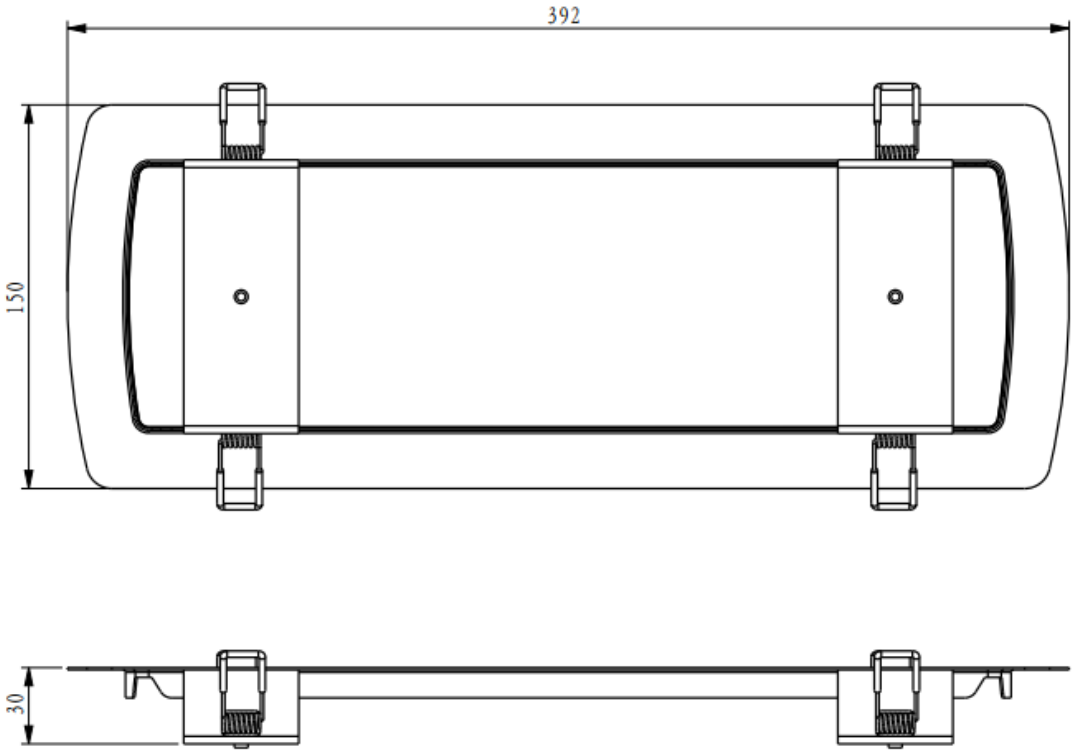

Installation

1. Cut ceiling hole 120 x 360mm.
2. Compress the springs and fit recessed kit into the ceiling.
3. Install emergency bulkhead into the recessed kit. Refer to the bulkhead installation instruction for more details.

t +44 (0) 1604 495 151 I f +44 (0) 1604 495 095 I e sales@collingwoodgroup.com I w collingwoodlighting.com
Collingwood Lighting, Brooklands House, Sywell Aerodrome, Sywell, Northampton NN6 0BT, United Kingdom

t +32 (0)4 351 91 40 I e info@indigo-lighting.com I w www.indigo-lighting.com
Indigo S.A. / N.V. Rue de la légende 32 G, 4141 Srimont – Belgique